

Technical Rider for Jump, Jive, and Wail

Band: The Band consists of Seven (7) Members and Is As Follows: If backline is provided, please make sure the instruments are of professional quality.

- Trumpet
- Trombone
- Saxophone
- Upright Bass With Amp Has XLR Out to Mixer
- Drums
- Guitar
- Piano w/bench
- 4-Vocalists

Power:

- One (1) 20A Outlet Stage Right. One (1) 20A Outlet Stage Left; For Keyboard, Bass Amp, and Stand Lights
- Four (4) Extension Chords

Microphones:

- Kick- D112
- Snare-SM57
- Overhead-SM81
- Bass- Direct Input Box
- Guitar- Direct Input Box
- Piano-Direct Input Box
- Saxes- Beta57. 1 For Each Saxophone
- Trumpets- Beta57. 1 Microphone for every 2 Trumpets. 1-for Band Director
- Horns-3- Wireless UR1 Shure belt packs with Shure Beta 98H horn mics and clips **(No Lavalieres)**
- Singers- 5-Wireless UR1 Shure belt packs with over ear countryman e6i Microphones. Or Sennheiser dpa equivalent **(No Lavalieres)**
- ***No Lavalier Microphones can be used***

Note: Microphones Can Be Exchanged For One Equally Comparable, Are Dependant On Room Size, And Must Have Accompanying Boom Mic Stands.

Chairs and Stools:

- Five (5) Stools

Music Stands:

Note: (3) Music Stands

Band Risers:

(1) Band risers will be needed. Dimensions should be no less than 6ft X 12ft in size

Monitors:

- Monitor Wedge SR and SL
- Monitor for Drummer (Center Stage), Galaxy Hot Spot, Behringer Eurolive B205D, or Equally Comparable

Mixer:

- 24 Channel Minimum with Four Aux Monitor Mixes.
- Graphic EQ for tuning Mains and Monitors.

Main Speakers:

- Two (2) 1000 Watt Speakers- Minimum Requirement (Will Change Based On Venue Size)

*Please provide (48) bottled water for every two hour set

*Please note that a 15 min. break will be given to musicians every hour

*If a mic is needed for your event for speeches please request one from the audio company in addition to what's needed in this rider

Contact: Terry Kippenberger


terry@artistsofmainstage.com

314-862-1408

Jump, Jive and Wail Stage Plot




(Riser)

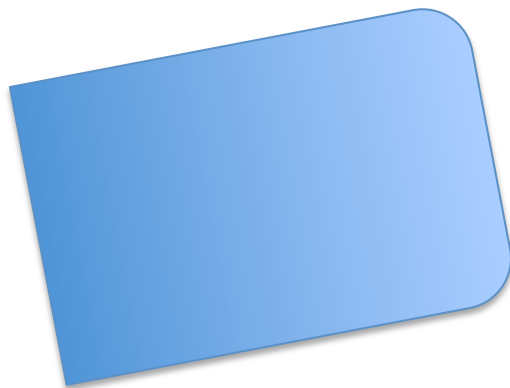

Piano (Tom)



Vocalist (Cristina)

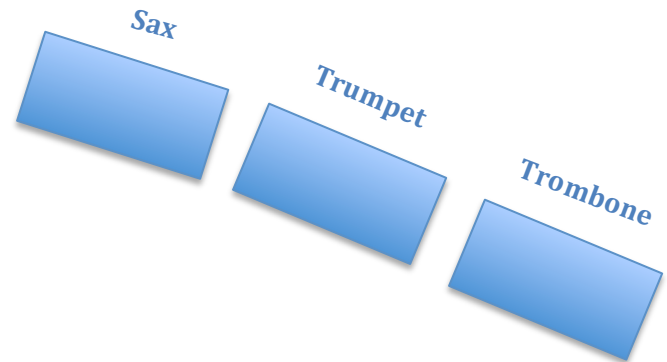

Sax

Trumpet

Trombone